

Replacing The In-Line Sample Filter


You will need:

- 1) The replacement filter
- 2) Two crescent wrenches
OR a 9/16" and a 3/4" end wrench
- 3) A permanent marker


Put The Unit To Sleep

Refer to the GreenFeed manual for instructions on putting your unit to sleep.

Open the Back Flap/Cover to Reveal the Sample Filter

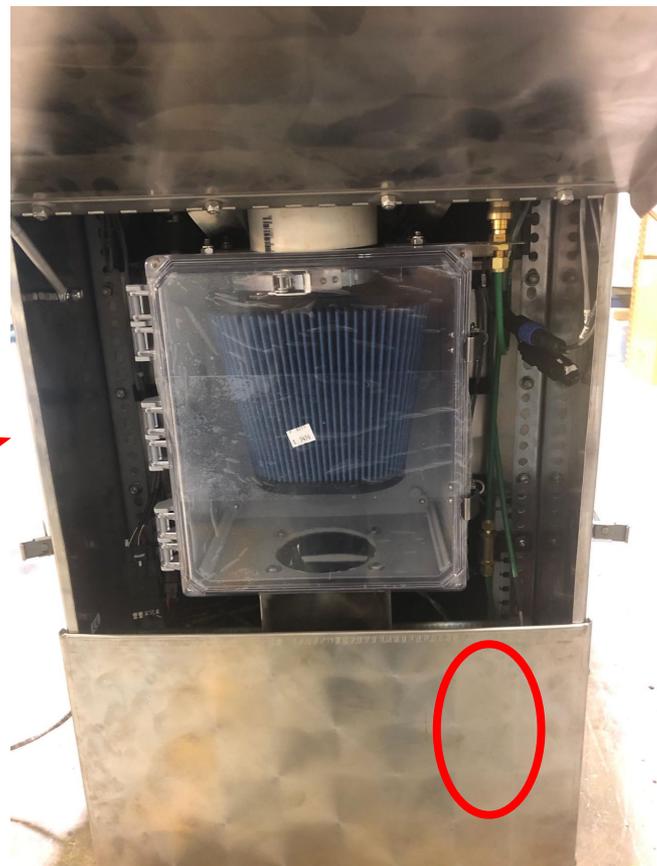

Locate the Sample Filter

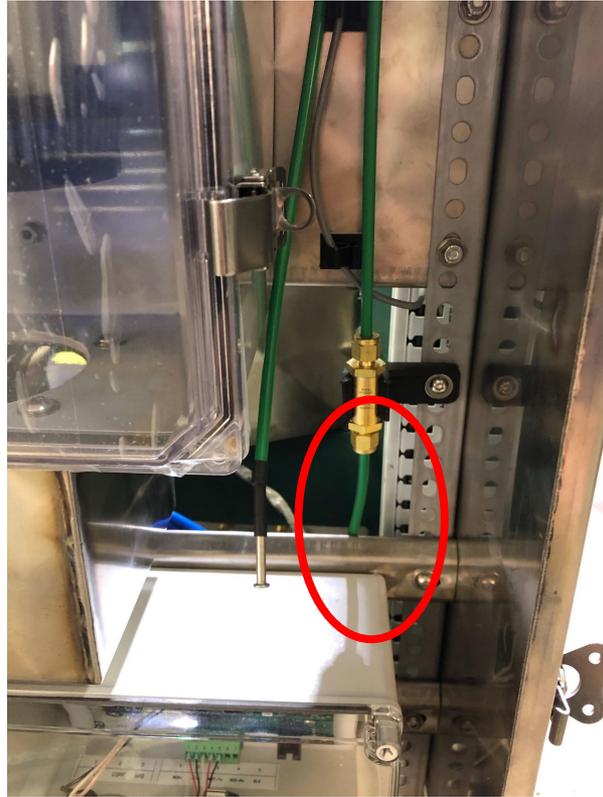


Use Wrenches to Loosen the Bottom Fitting



Use Wrenches to Loosen the Top Fitting



Unscrew Both Fittings Until They Disconnect

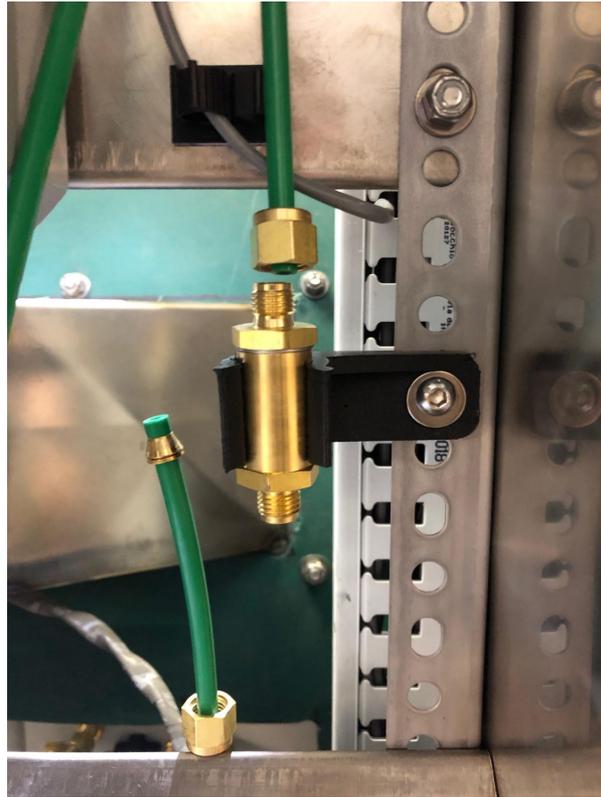

Remove the Old Filter and Install the New One

Ensure the ARROW on the filter points DOWNWARD

Attach both fittings to the new filter. Tighten them until they are “finger-tight”.

Then use the wrenches to turn the fittings an additional $\frac{1}{2}$ turn.



Record the date of installation

Use a permanent marker to mark the date of installation.



Put the Back Cover Back On and Close the Flap

The sample filter is now replaced.

Please contact support@c-lockinc.com if you have any questions.